



# 3 CRITICAL STEPS FOR A PERFECT INSTALLATION



*NOTE: Magnets are NOT required*

**1-TOP OF KNOB and ORIENTATION:** Top of knob must point straight up. The solid RED disc is the BACK of the DISC and must face towards stove.

**2-TAPE:** Use 3 pcs of tape spaced equally around the knob. 3 pcs of tape will insure a perfect attachment.

**DO NOT REMOVE SILVER BACKER OFF TAPE**

**3-COLLARS:** Collars are designed to maintain a separation between the BurnerAlert and stove face to allow the knob to be depressed.

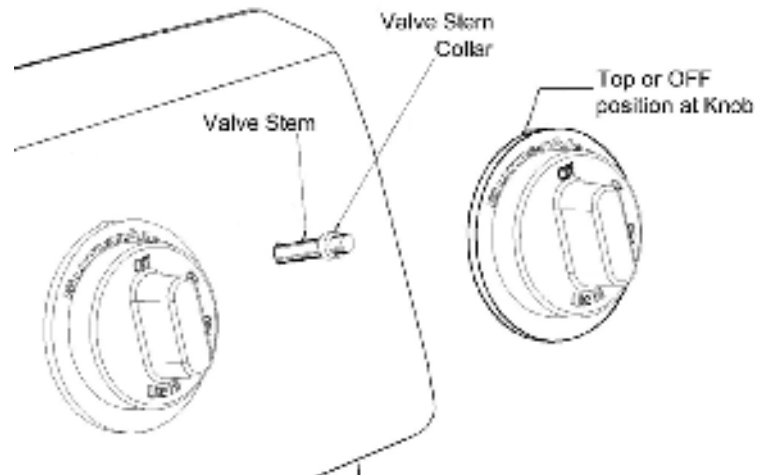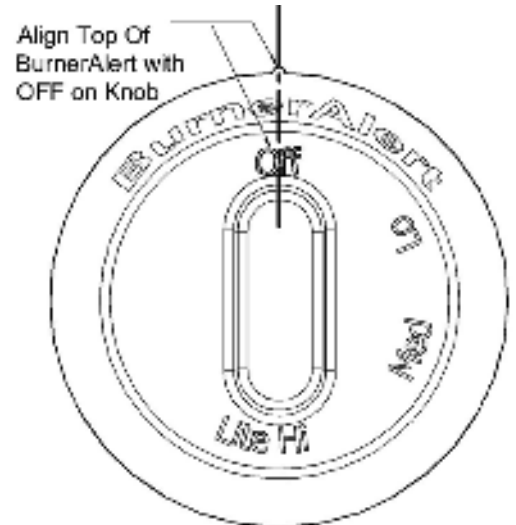

**WATCH INSTALLATION VIDEO AT**

**<https://burneralert.com/installing-burneralert/>**

## **IMPORTANT**

If you have any Questions on installation or general questions on how to use BurnerAlert, please email us at [balert@burneralert.com](mailto:balert@burneralert.com) or call Matt at 908-326-6410 from 7:00 am to 7 pm EST.

We love to help, so if you are uncertain about any installation step, please call. 5 minutes with Matt can make all the difference.

## **BURNERALERT FREQUENCY OF BEEPS AND FLASHINGS**

The BurnerAlert stove reminder is designed to provide periodic alerts during use. Below is a description of the frequency of beeps and flashes that BurnerAlert will emit during use.

The BurnerAlert beeping does not occur all the time. The beeping has set intervals. Once you turn the knob towards the “ON” position the BurnerAlert begins to work. You will hear 3 short beeps and see 3 blinks, then at 3 minutes you will hear 3 sets of 3 beeps followed by 30 seconds of blinking, then at 9 minutes you will hear 3 sets of 3 beeps followed by 30 seconds of blinking, then at 15 minutes you will hear 3 sets of 3 beeps followed by 30 seconds of blinking, and then every 15 minutes you will hear 3 sets of 3 beeps followed by 30 seconds of blinking. At 1 hour you will hear 6 sets of 3 beeps followed by 30 seconds of blinking. This is good when you are simmering for an hour plus. Also, every 7.5 minutes the BurnerAlert will blink (no beeping) for 30 seconds. After the initial 15 minutes the sequence will continue every 15 minutes until you turn off the stove burner. When you turn the knob to “OFF” (vertical orientation only) the BurnerAlert will blink once. (Vertical Orientation Model Only)

**Also see how you can use BurnerAlert as a cooking timer:**

<https://burneralert.com/video-burneralert-demo/cooking-with-burneralert/>