




3 CRITICAL STEPS FOR A PERFECT INSTALLATION

NOTE: Magnets are NOT required

1-TOP OF KNOB: Top of knob must point straight up.

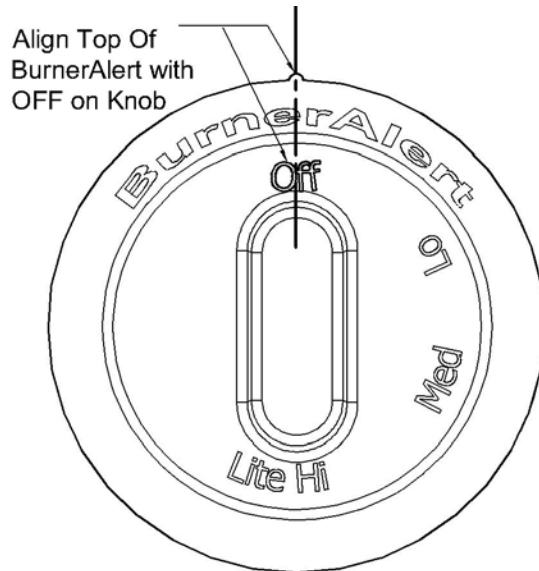

2-TAPE: Use 3 pcs of tape spaced equally around the knob. 3 pcs of tape will insure a perfect attachment.

3-COLLARS: Collars are designed to maintain a separation between the BurnerAlert and stove face to allow the knob to be depressed.

